**DEC950** 



**Doug's Electric Cutouts Motor Assembly** Installation Instructions

1. Remove the 6 screws from the parameter of

2. Remove outlet side plate and cutout spacers.

Remove three screws that hold motor to

7. Remove three screws from aluminum motor

Install adapter on the replacement motor

in the reverse order. Use thread locker on all screws to prevent screws from loosening.

Use the provided hardware and re-assemble

Remove the motor assembly from the cutout

4. Remove remove pin from motor shaft.

the cutout body. Figure A

Remove cutout gate.

cutout body. Figure B

adapter. Figure C

3.

5.

6.

8.

9.

body.



**Doug's Electric Cutouts Motor Assembly** Installation Instructions

- 1. Remove the 6 screws from the parameter of the cutout body. Figure A
- 2. Remove outlet side plate and cutout spacers.

- cutout body. Figure B
- 6. Remove the motor assembly from the cutout bodv.
- 7. Remove three screws from aluminum motor adapter. Figure C
- in the reverse order. Use thread locker on all screws to prevent screws from loosening.

















440 E. Arrow Highway, San Dimas, CA 91773 (909) 599-5955 www.pertronix.com



- 3. Remove cutout gate.
- 4. Remove remove pin from motor shaft.
- 5. Remove three screws that hold motor to



- 8. Install adapter on the replacement motor
- 9. Use the provided hardware and re-assemble



Figure A

Figure C



**DEC950**